

Display




Normal Operations



To Change Channels



Squelch On/Off Control

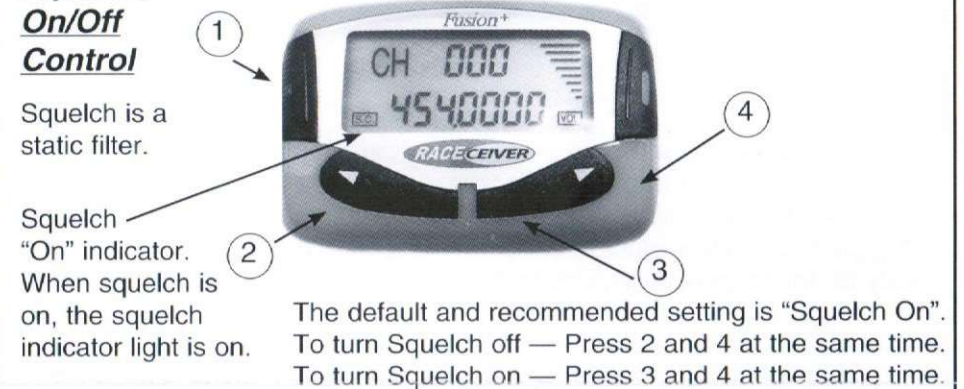

RACEceiver Rookie Drivers Earpieces come with 3 sizes of replaceable rubber tips for a semi-custom fit. To replace the tips, remove the old tips, and slide the replacement tip over the shaft. Do not force the earpiece into the ear. They should fit snugly and not be uncomfortable.

Troubleshooting

1. All I hear is static. — Be sure the squelch is on.
2. The display shows numbers counting to 10 over and over. — Change the battery.
3. Does not sound as clear as it did yesterday or this morning. — Change the battery.
4. It sounds a little scratchy or rough. — Back the volume down a notch or two.

Recommendations

1. Don't try "no name" batteries — Use the good ones. A quality AAA battery should last 20–24 hours.
2. Take the battery out after a race.
3. If it rains, try to keep your RACEceiver as dry as possible.

Programmable Default Channel



Button Lock

To prevent accidental change of channels
Press the Red button and the Right White Arrow button together

To change the default channel

1. Hold blue button until channel number flashes.
2. Use the red and white buttons to advance to the desired default channel.
3. Hold both white arrow buttons down for two seconds then release.